



ITEM	PART NO.	DESCRIPTION
1	K20015	Knob, Pointer
2	K20013	Knob, Round
3	208306	Battery Bd. Assy.
4	208282	Capitive Screw (4 Req'd)
5	208195	Tip
6	208345	Potentiometer Assy.
7	208323	Gasket, Base
8	302375	LCD - Satellite Bd. Assy.
9	302372	Main Bd. Assy.
10	302276	Chassis
11	208348	Cover & Handle Assy.
12	SMV/IN6C500	Screw (2 Req'd)
13	H30006	Headset (Optional)
14	302145	Case
15	B11014	9V Lithium Battery (2 Req'd)
16	208349	Interface Cable Assy.
17	208347	Speaker Cable Assy.

GA-72Cd Repair Parts